







TUB DRAIN QUICK REFERENCE





WASTE & OVERFLOW FULL KIT: **NEW TUB INSTALL**

COMPLETE FULL KIT
TRIM
ROUGH-IN

LIFT & TURN 	PUSH PULL 	FOOT ACTUATED 	PRESFLO 
900-LT-PVC-__	900-PP-PVC-__	900-FA-PVC-__	900-PF-PVC-__
900-LTSF-0-__	900-PPSF-0-__	900-FASF-0-__	900-PFSF-0-__
ZINC STRAINER BRASS STRAINER	900-ZRI-PVC-CP 900-BRI-PVC-__	<i>Chrome Only</i> <i>Chrome + Finishes</i>	PRESS FLO ROUGH IN 900-PFRI-PVC-CP

WASTE & OVERFLOW HALF KIT: **NEW TUB INSTALL**

COMPLETE HALF KIT
TRIM
ROUGH-IN

LIFT & TURN 	PUSH PULL 	FOOT ACTUATED 	PRESFLO 
901-LT-PVC-__	901-PP-PVC-__	901-FA-PVC-__	901-PF-PVC-__
900-LTSF-0-__	900-PPSF-0-__	900-FASF-0-__	900-PFSF-0-__
ZINC STRAINER BRASS STRAINER	901-ZRI-PVC-CP 901-BRI-PVC-__	<i>Chrome Only</i> <i>Chrome + Finishes</i>	PRESS FLO ROUGH IN 901-PFRI-PVC-CP




TUB DRAIN QUICK REFERENCE

WASTE & OVERFLOW QUICK TRIM: **REPAIR / REMODEL**

Works on any existing tub application. For changing finish or replacing old waste & overflow.

COMPLETE TRIM KIT

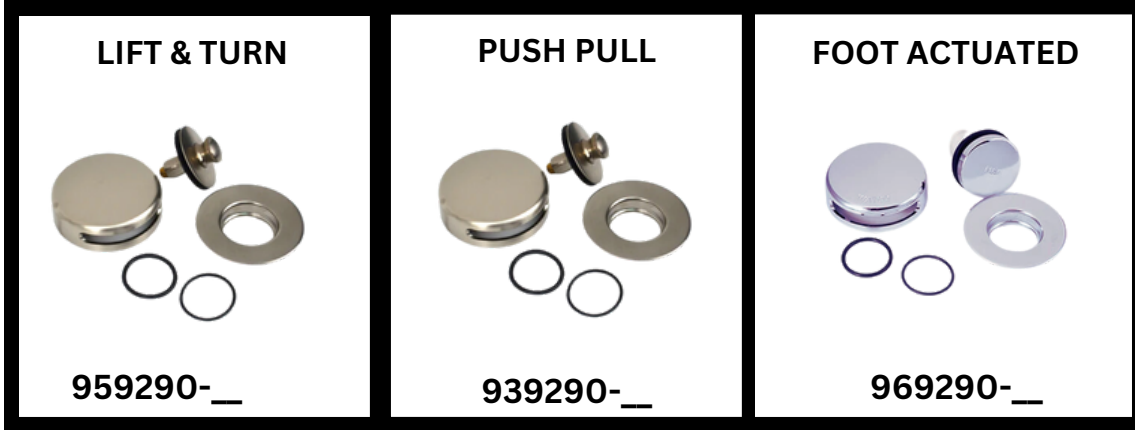


To order adapter bar and star nut, add "-11" to part number. (ie. 939290-BN-11)

WASTE & OVERFLOW NUFIT TRIM: **REPAIR / REMODEL**

Works on any existing tub application. For changing finish or replacing old waste & overflow.

COMPLETE TRIM KIT

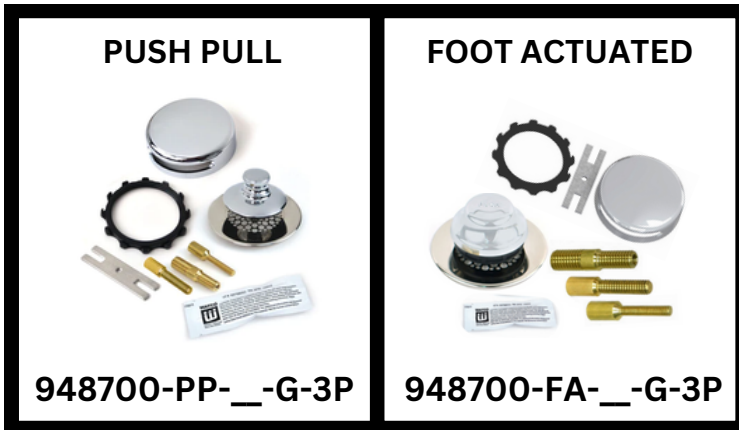

AVAILABLE FINISHES

-__ INDICATES WHERE FINISH SHOULD BE IN MODEL NUMBER



Brushed Bronze (BB)
(Champagne Bronze)



Brushed Nickel (BN)



Biscuit (BS)



Oil-Rubbed Bronze (BZ)



White (WH)



Brushed Gold (BG)



Chrome Brushed (CB)



Chrome Plated (CP)



Nickel Polished (NP)



Polished Brass (PB)



Wrought Iron (WI)
(Matte Black)



Stainless Black (SB)